




Soundproof
Warehouse



Install Guide

HOME OFFICE REVERB CONTROL

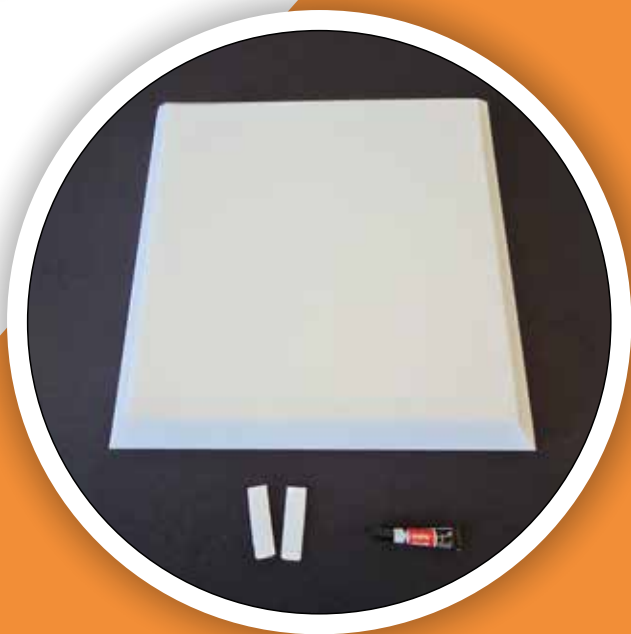

Kit contents Acoustic panels

The kit includes 6 panels
830 x 415 x 50mm and
6 panels 415 x 415 x 50mm

Kit contents Mounting Hardware

The mounting hardware
is included. Everything you
need is in the box

Installation - acoustic wall panel

For the small and large acoustic wall panels, the mounting hardware is shown in the picture - removable hook and loop strip and supa glue



STEP 1 - APPLY THE SUPA GLUE

Apply supa glue to the back top edge in the middle of the panel.
A single line as long as the removable strip is needed.

STEP 2 - APPLY THE REMOVABLE HOOK SIDE

Unpeel the paper back from the removable strip and apply over the supa glue. (the sticky side goes on the supa glue) Press firmly and be careful to not get supa glue on yourself




STEP 3 - APPLY TO THE WELL

Put the other piece of the removable strip onto the one already on the panel. Remove the backing paper. Line up the panel where you want it to be installed and firmly press into place. Repeat for the remaining 8 Panels.



LOW / MID TRAP INSTALLATION

For the Low / Mid Traps, the mounting hardware is shown in the picture
- removable hook and loop strip and
supa glue

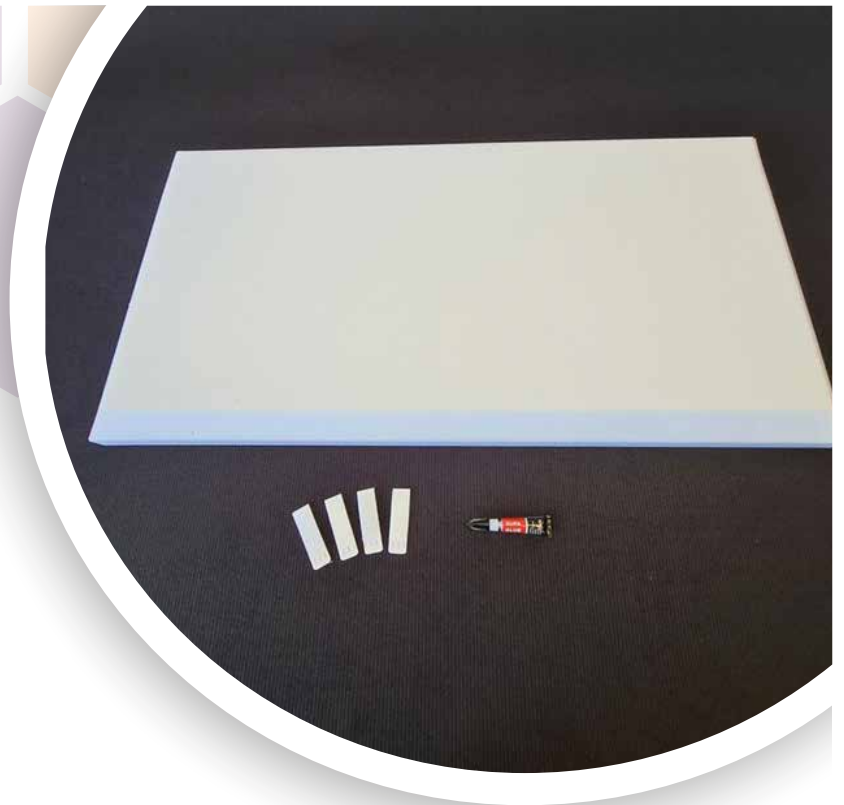

STEP -1 APPLY THE SUPA GLUE



Apply supa glue to the beveled edge about 50mm down from the top corner on both sides

STEP 2 - APPLY THE REMOVABLE HOOK SIDE



Unpeel the paper back from the removable hook and apply over the supa glue

STEP 3 - APPLY TO THE WALL JUNCTION



Put the other piece of the removable strip onto the one already on the low/mid trap.
Remove the backing paper. Line up the panel where you want it to be installed and firmly press into place. Repeat for other one.



CEILING PANEL INSTALLATION

For the ceiling panels you will need everything in the picture

STEP 1 PREPARE THE METAL EYES



Screw in the metal eyelet into the plaster mate plugs

STEP 2 PREPARE THE PLASTIC HOOPS



Start by sticking one side of the small removable strip to the plastic hoops

STEP 3 PUT THE TEMPLATE ON



Place the cardboard template on the back of the panel. Push in the metal hooks into the panel until the screw thread touches the panel



Close up of installed screw and eye
Screw in the plaster mate plug until its in fully



Screws in and ready to install

STEP 4 - ATTACH THE STRING



Attach the string to the desired length to the metal eyes.
Make sure they're all the same length.
We recommend a loop at both ends


STEP 5 - INSTALL PLASTIC LOOPS



Place the template where you would like the ceiling panel to be installed.
unpeel the wall side of the loops and install them using the template
Place the template where you would like the ceiling panel to be installed.
unpeel the wall side of the loops and install them using the template



CLOSE UP
The removable loops will look like this

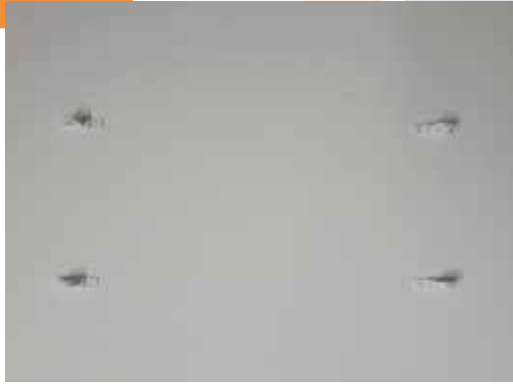

PLASTIC LOOPS INSTALLED
We are now ready to install the panel



STEP 6 - OPEN THE PLASTIC LOOPS



STEP 7 - HOOK THE STRING ON & CLOSE THE LOOPS
As you can see, the panels are light enough to hang on 1 or 2 mounting points



DONE
Prince installed, the string will hang straight



INSTALLED
Now repeat for the remaining ceiling panel



Installation Ideas

Note: These are just a guide for typical install. Also the ceiling panels can be direct stuck to the ceiling if desired. If a window is in the way of a wall panel. Install with 2 Wall Plugs in the same fashion as the ceiling panels and hang from the window architrave. If more removable (or different) mounting hardware is required, they are readily available from Hardware Stores.

Installation Ideas

Make sure you install Low/Mid Traps in the Upper corners

Thanks for purchasing and enjoy



Get Your Obligation Free Quote

Contact Us

📍 Unit 5 16-18 Riverland Drive
Loganholme 4129
(By Appointment Only)

☎ 07 3287 7647

✉ info@soundproofwarehouse.com.au

🕒 Open 7 Days 9am - 5pm